

SIM Green Instructions

Big Moss Simulator Solutions



**- Important Information -
Please read carefully before
using your putting green**



Thank you for purchasing the Simulator Solutions putting & chipping green from Big Moss!

Included in this package are :

- Putting Green Surface
- Foam Foundations
- Backstop
- 4 inch golf tees to pin in backstops
- Safety Flag sticks
- White cup ring Strips
- Break pads
- Seam Tape (if putting surface is over 12ft width)


Set Up your green:

Make sure the floor of the hitting bay is open and clean. Set up is much easier with 2 people.

1. Line up the foam foundations at the backside of the bay with the drawn arrows facing up & pointing at each other at the seams. 'L' is for the Left foundation, 'R' is for the Right, & if you have 3 foundations, 'C' is Center. Try to keep the foundation seam square with as little separation as possible.
2. Unroll the putting surface & square it up to the foundations keeping the holes, roughly lined up. If the holes do not appear lined up, recheck that you have the foundations arranged appropriately.
3. This part is easier with 2 people. Drag the putting surface over the foundations and line up the holes. If both people carefully step backwards onto the foundations they should remain in place while you slide the carpet up. You may need to wave the carpet to get some air underneath it, in order for it to slide easily. Once you get the putting surface lined up perfectly to the holes, step them down around the edges so the tape holds them in place.

ACCESSORY INSTALL INSTRUCTIONS ON BACK

Set up photos:

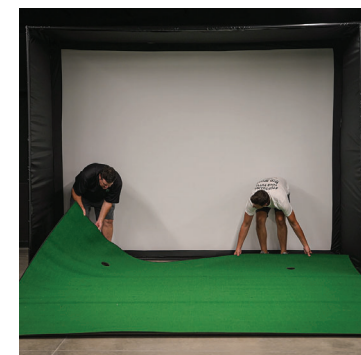

Seaming : If you have a surface wider than 12 feet you may require a seam. If so, there is a length of seam tape in your package.

1. Follow the previous steps but leave a space between the sections that require a seam. Unroll the seam tape and remove one side of the white backing. *Be careful not to let the tape touch itself, it is very hard to remove.* Carefully slide the seam tape underneath the larger side of the green while lining up the red strip on the tape that corresponds to the same side you are seaming. Once this is accurately placed, press or step down the seam to adhere the tape.

2. To line up the other side of the seam, both people will need to pull the other edge over parallel to the seam keeping the putting surface above the tape for now. Starting at the front of the green, roll the edge down at an angle so only the edge is touching the tape, exactly butting it to the other side. Keep doing this down the length of the seam until the entire edge is perfectly flush. When you are satisfied both ends are flush together, you can rub down the surface along the entire seam to set the tape in place.



Roll the edge to make a flush seam



Backstop install

If you choose to use the backstops, wrap them around the back of the green and pin them to the foam foundation using the supplied tees. Try to pin them with the tees going straight into the middle of the foam with as little angle as possible.

Install the flags

Place the cup sleeves inside the holes first. Then screw the flagstick on the base. Now slip the flag over the spring and install it inside the cup.

Ramp Install

If you purchased a return/putting ramp, remove the white backing from the seam tape on the backside of the putting surface. Line up the thick, smooth side of the foam foundation to the tape and press down firmly. Line the ramp up to the edge of your hitting mat.



BIGMOSS.COM

P: 1-815-893-4410
3305 S. State Rt. 31, Unit 2
Crystal Lake, IL 60012
email: bigmossgolf@yahoo.com



All contents © 2022 Big Moss Golf Inc.
No portion of this booklet may be reproduced without permission.